





 


 
TEEPLUG® Plug-and-Socket Connectors Installation Instructions

 


 
Disconnect Power


TH384 / TH385 Series







 




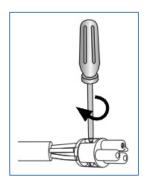


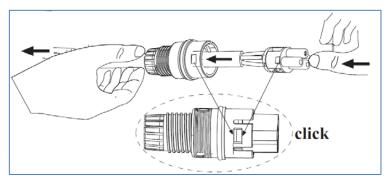

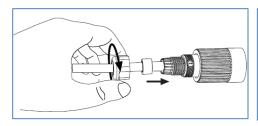



Panel mount illustrated below (M25 for THB.385.A1A, M20 for THB.385.A3F)

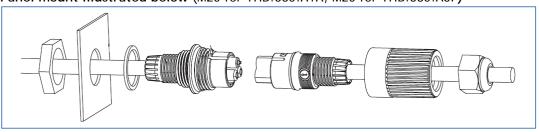











TEEPLUG® Plug-and-Socket Connectors Installation Instructions





Disconnect Power

TH387 Series

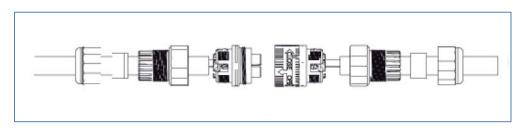

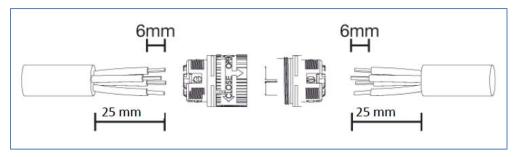

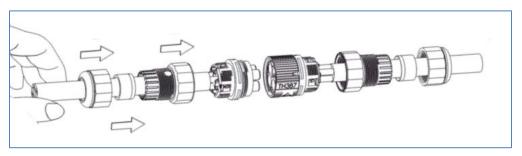

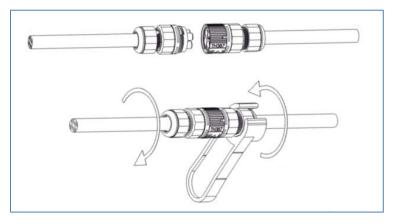











TEEPLUG® Plug-and-Socket Connectors Installation Instructions




Disconnect Power


TH405 Series

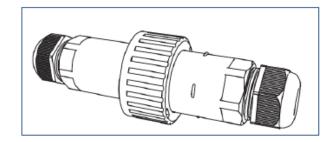


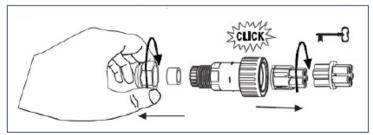


Unlock insert using the key

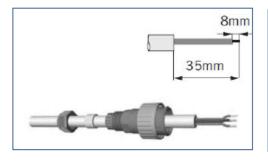


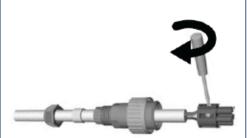

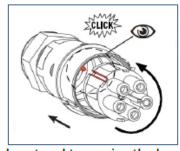

Insert and turn using the key

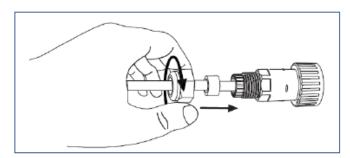

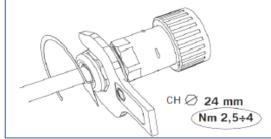

■ ITC Electrical Components ■ sales@itcproducts.com ■ www.itcproducts.com ■ Tel: 416-663-7223 ■ Fax: 416-663-7224











TEEPLUG® Plug-and-Socket Connectors Installation Instructions





Disconnect Power


TH406 Series

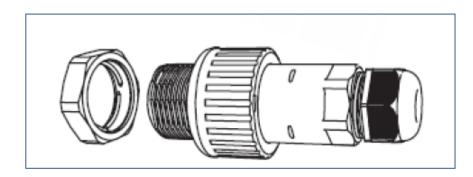

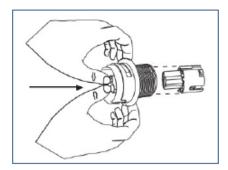

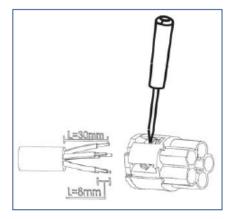

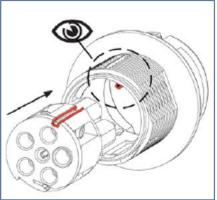

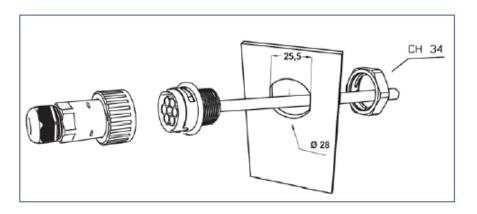

Printed in Canada: 18-05 EM-1621-1